



EAGLE BATH

Install manual

Steam bathroom

MODEL : WS-609P



www.eaglebath.com

No advanced advice will be submit before we change our design and size.

The pictures may be a little different from the real products.

Our company keep the final explanation right.



Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



Dear Guest,

Thank you very much for purchasing our sanitary ware. To enable you to use this product safely and effectively, please read this installation and operation manual carefully before use.

CAUTIONS


1. Please ensure that the product installed reliable electric leakage protection device, the power plug contains earth line, and make sure it is reliable earth line. Check the protect system of leakage protection each time before use.
2. Do not turn on water pump, heat pump or air bubble pump without water.
3. Before turn on water pump, check if the water level over jets 10 to 20 mm or not, make sure regular usage of water pump otherwise it will be destroy because of water leakage.
4. People with Hypertension symptom, after drink or heart disease are not allowed to use the bathtub. Children have a bath must under adult's guidance.
5. During use please noticed that don't blocked the jets and avoiding the air adjustment valve overflowing. Also keep the bathtub clean and don't let it blocked by hair or mess.
6. During use, please firstly adjust the water temperature or it will be burned.
7. The bathtub is designed with ergonomic, rise and fall changes are quite big so during usage pay more attention of be slipped.
8. Please shut down the system when not to use.

TECHNIQUE PARAMETER


Voltage	Frequency	Water Volatge	Power of steam generator	Power of water pump	Power of heat pump	Power of air pump	Storage capacity	Storage capacity
Ac 110V(±10%)	60Hz	0.1~0.2Mpa	2.65KW	1.0HP	1KW	0.2KW	40gallon	0.18m ³

CAUTIONS: Heat pump and air bubble pump is optional purchase.

 
 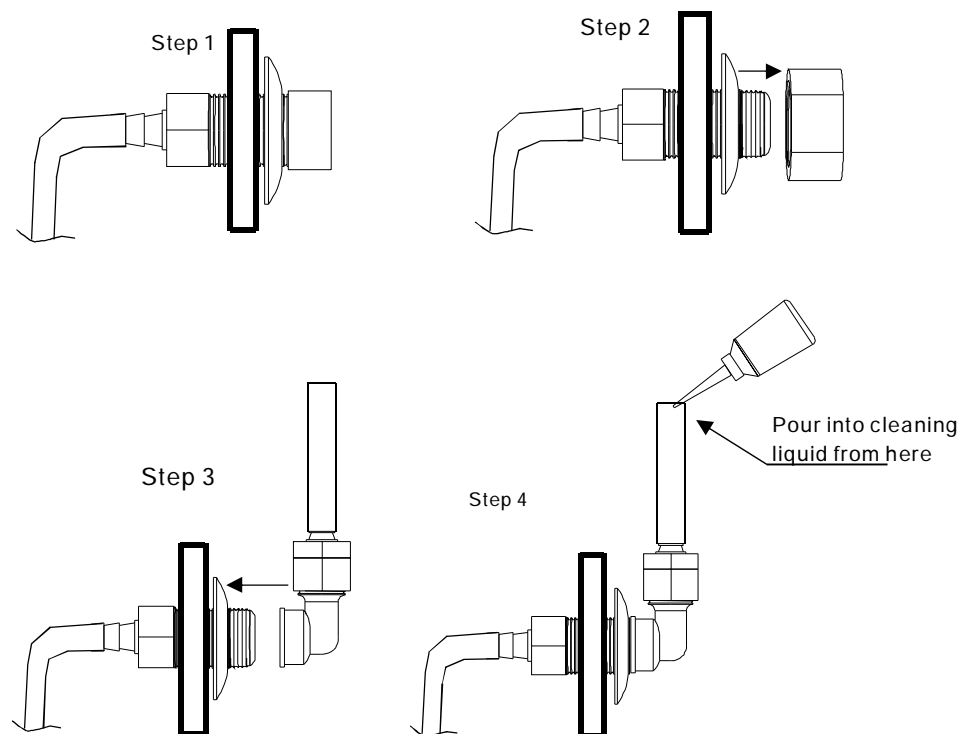



 
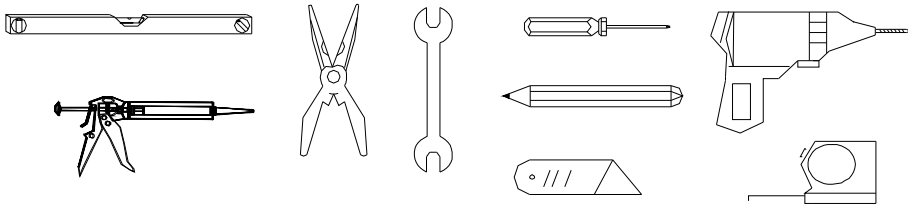
Self-clean system




Cleaning method :

1. Clean the steam engine regularly at least once by every 2 weeks or after using 20 times.
2. Inject citric acid as main cleaning liquid, add 1.5L each time. after 10 minutes, turn on and When the system turns on, press “” button to start the steam function for about 30 seconds and then shut down the system. After vent the stagnant water, repeat 2 or 3 times.
3. CAUTION: The system must be shut down before injecting

Packing list

Packing 1	2pcs blue coated glass + 2pcs fixed door with aluminum poles around + 2pcs movable door + STRIPS			
Packing 2	Ceiling +bottom tub + steam pipe			
Packing 3	Control panel cap; Shower, Wheel with cap, Shampoo box, Drainer cap, T-pillow, Glass handrail ,door Handel, Towel handle, Self clean system, Screws, soap box			
	SCREW (1)	M6x25		16pcs
	SCREW (2)	M6x35		8pcs
	SCREW (3)	St4x20		10pcs
	SCREW (4)	St4x25		14pcs
	SCREW (5)	ST4x16		4pcs
	SCREW (6)	M4x20		30pcs
				


● Identification of components

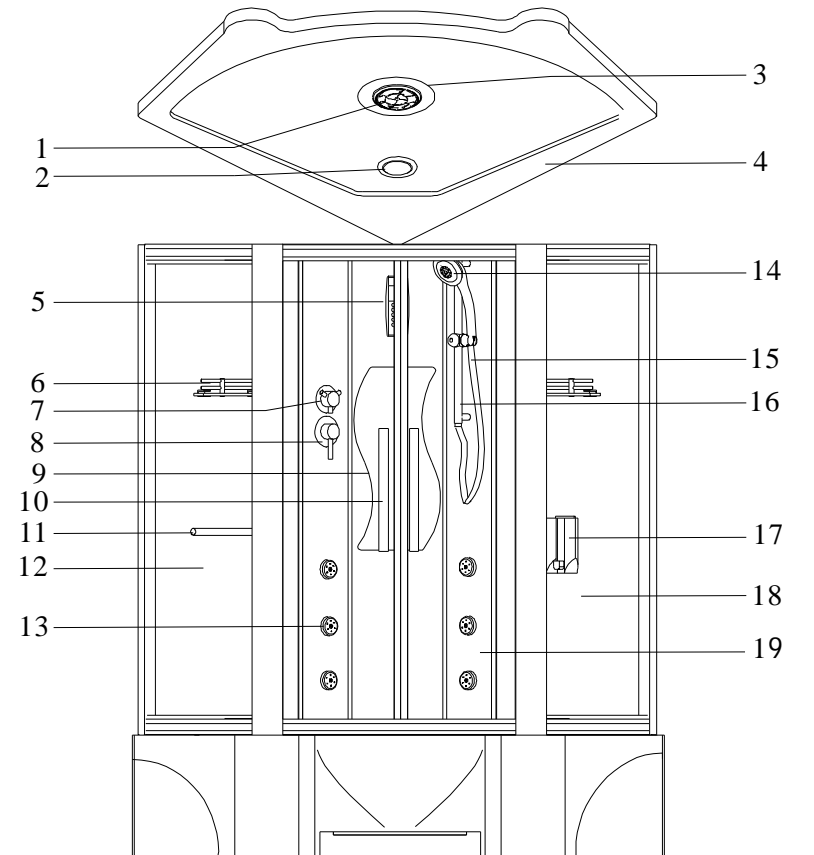

1.Top shower
2.Exhaust fan
3.Top light
4.Roof
5.Control panel



6.Storage shelf
7.Function shift switch
8.Hot/cold water switch
9.Mirror
10.Handle
11.Handrail
12.Left body glass

13.Nozzle
14.Moveable shower
15.Shower chain
16.Elevating holder
17.Soap box
18.Right body glass
19.Room body

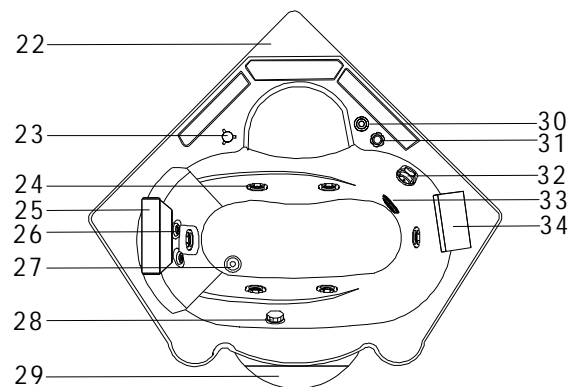

- | | |
|----------------------|-----------------------------------------|
| 22. Bathtub | 30. Air switch to open water pump |
| 23. Waterfall switch | 31. Air adjuster to strength jets water |
| 24. Water jet(6PC) | 32. Steam outlet |
| 25. Pillow | 33. Recycle net |
| 26. Nozzle | 34. Waterfall |
| 27. Drainage | |
| 28. Drainage switch | |
| 29. Marble | |

● INSTALLATION SKETCH

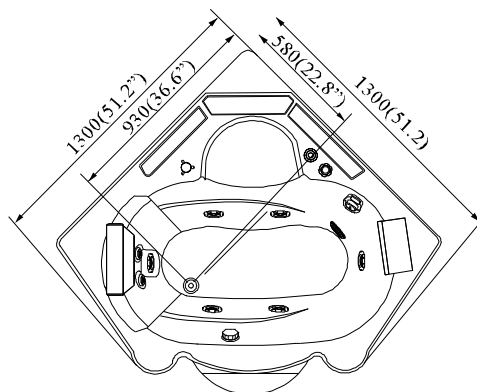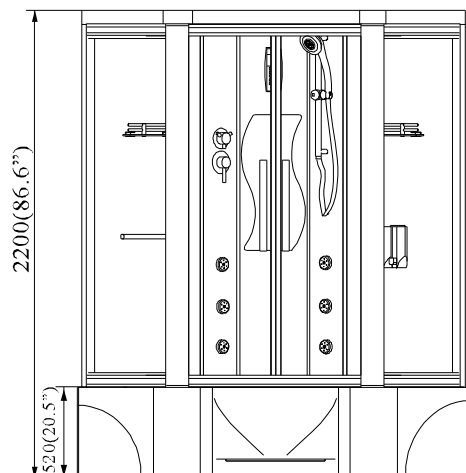

1300*1300*2200MM
51.2"*51.2"*86.6"

● ATTENTION

1. In order to be tripped and fell down, pay more attention when get into the steam room. Please don't shut the finger in the door in order to be hurt.
2. In order to avoid damaging the surface of products please do not use hardness and sharpness tool to curve the products.
3. In order to course fire, no smoking inside the bathroom.
4. the jets of steam and drainage pipe both are high temperature when products working, in order to be hurt please be careful.
5. In order to be tripped and fell down please keep clear of the bathtub after taking shower each time.
6. It will be leaking if the glass glue plastic sheet be off then please add some more for recover.
7. If there are marks of water please clear with soft cloth and toothpaste.
8. In order to be blocked of drainage device please keep clean of the surface of bathtub.
9. Please do not hang up heavy things on the steam room or the handle of steam room.
10. Please deal with the products according to the local laws when it is no longer be use.

● ATTENTION FOR USAGE

1. check if power and cold/hot water switch be turn on or be turn off each time before use this product.
2. check if power of electronic leakage device be get through or not.
Checking way:
Press testing button, light of power be off, press button of restart then light of power be on. It is not being what mentioned above after operated step by step, then that shows the electronic protection device out off control or there is something wrong with the electronic leakage device, so should ask professional to check and maintain the product.
3. Turn off the main power of control panel after stop usage. The plug of power should be pull out because only turn off all the functions of control panel that is not stop the power.
4. People with hypertension or drunk are not allowed to have sauna steam bath.
5. Children should have sauna steam bath under adult's instruction.
6. Please don't shut the finger in the door in order to be hurt when get into the steam room.
7. In order to be tripped and fell down, pay more attention when get into the steam room.
8. keep clean of the tray in order to be tripped and fell down.
9. Pay attention to the steam sprayer and water tank drainage, they are in high temperature while working.


Attention:

The machine must be fixed in the circuit which protected by creepage protection and should be well-connected with the ground. Nontechnical people can not be fixed or removed at random.

6、Technical parameter

Model	Voltage	Current	Power	protecting electrifying	Waterproof Grade
KL-824	110V	25A	2650W	I	Ip4
Top light	Sidelight	Fan	Water inlet valve	Water drain valve	
20W	5W	3.5W	6W	7W	
AC12V	AC12V	DC12V	DC12V	DC12V	

Notes

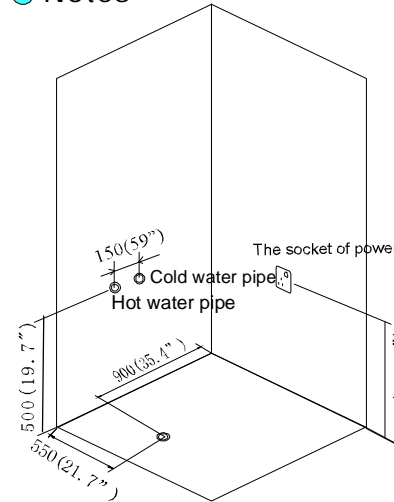


1. Install the steam bathroom in a proper way and have the electrician or professional personnel to install the unit, the company won't take the responsibility for any improper installation and usage.


2. The application of the product shall observe the operating instructions, dismantling and alteration without authorization is prohibited, the manufacturer shall not take the responsibility for any problems resulted from improper use or dismantling by one's self.


Please follow the steps to install the unit.

INSTALLATION PROCESS

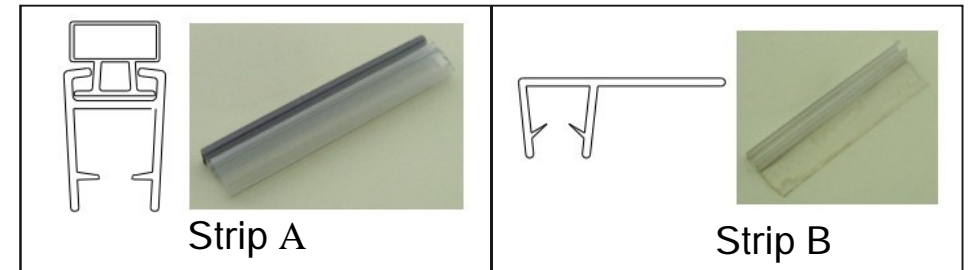

1. Assembly of tray
if the ground is not smooth, please adjust the nail under the tray to keep the balance of the tray and ground. Please take out the steam pipe in this step.

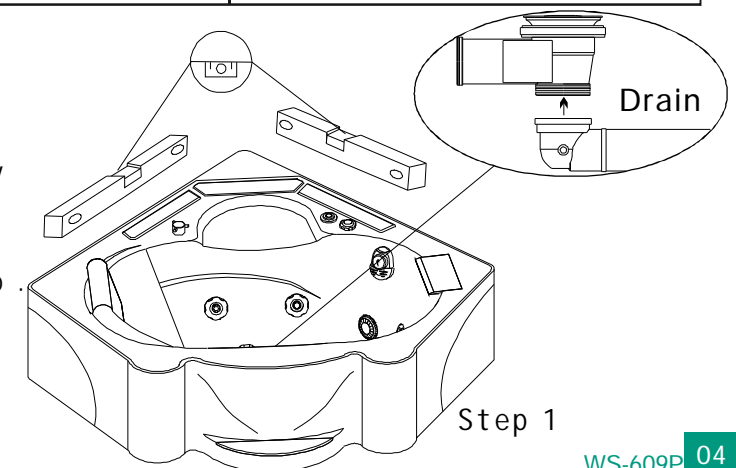


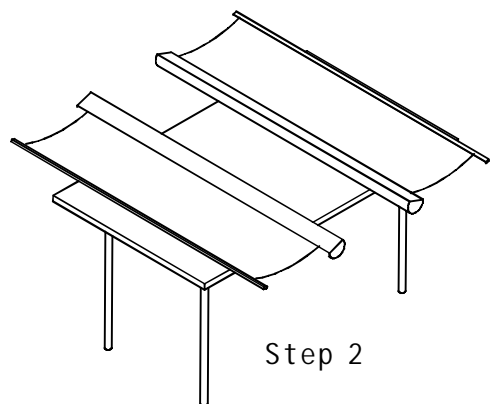


Step 2

2. Pls. put left and right blue clear fixed glass door on a soft table. Pls. pay attention to their direction on the table. Do not put the fixed door on hard table, or the glass will be damaged.

3. Pls. lock bottom aluminum frame & left fixed glass together by screws, next lock bottom aluminum frame & right fixed glass together in the same way. Next, pls. lock top aluminum frame and left, right fixed glass door together. Pls. pay attention to the detailed picture. After that, pls. stand the half finished front glass panel.

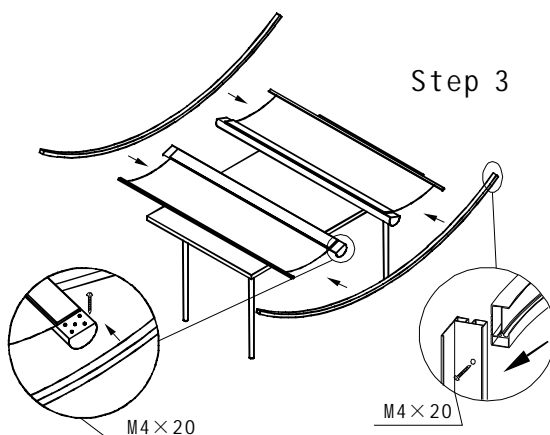

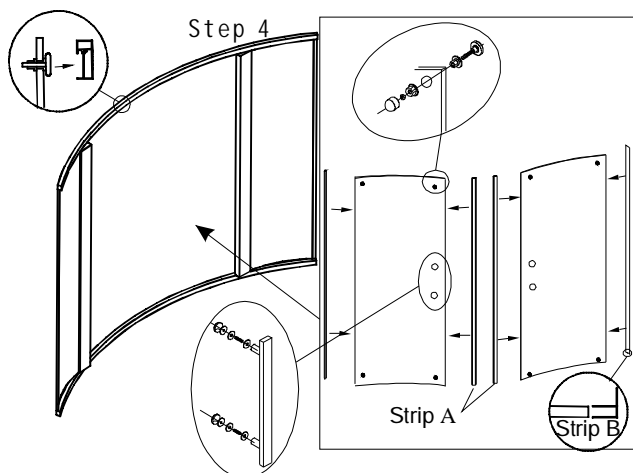

Step 3





 
Step 4

4. Install strip & magnetic strip on left & right side of the blue clear movable glass, also lock wheels on its up & bottom side. Do not tighten the wheels too close in this step. Put the movable door on front glass panel by putting its wheels on aluminum rails. Try push and pull the movable door, and adjust its tightness of the pulley to make the door run well. Finally, tighten the wheels of the movable door & install door handles on movable door.


(1) The electrical pitch

Press  pitch can open the machine, the temperature is the room temperature. The time will show 30m. At the same time, it will open the ceiling lamp. Press  again will close all the functions. (After the closure of the machine, the water case will drain for 2 minutes)


(2) The application of the back lamp

Press , the sidelight is on. Press  again, the ceiling lamp is out, press  a third press, the sidelight is out too.

3) The steam function

Press , startup the steam function, the water case will pump water automatically. After 60 minutes or so, it will generate steam. (When the water case is lack of water, the controller will replenish automatically)


(4) The air draft function

Under the condition of turning on, press  can start up air draft function, press again will close it.

(5) The setting of time or temperature

1. Press   pitch can adjust the time from 1-99.

2. Press   pitch can adjust the temperature from 30-60.

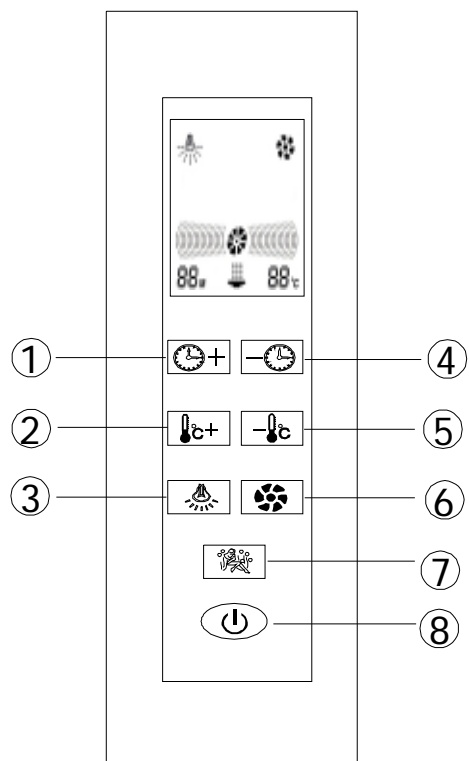

① Time adjustment pitch+

② Temperature adjustment pitch+

③ CeilingLamp/Back Lamp pitch


④ Time adjustment pitch-

⑤ Temperature adjustment pitch-


⑥ Fan Pitch

⑦ Steam Pitch


⑧ Main Cock Pitch

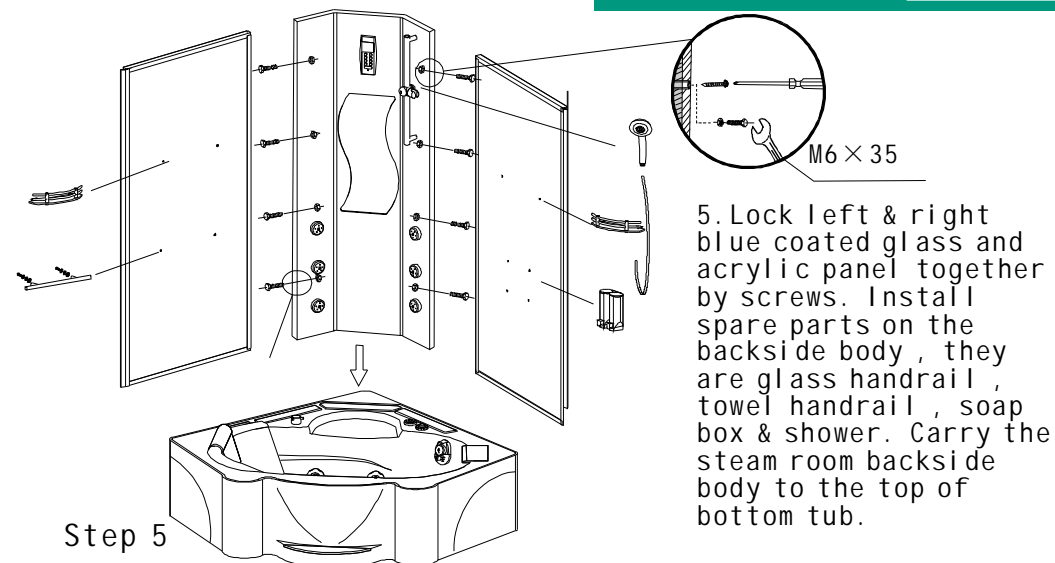

5. Lock left & right blue coated glass and acrylic panel together by screws. Install spare parts on the backside body, they are glass handrail, towel handrail, soap box & shower. Carry the steam room backside body to the top of bottom tub.

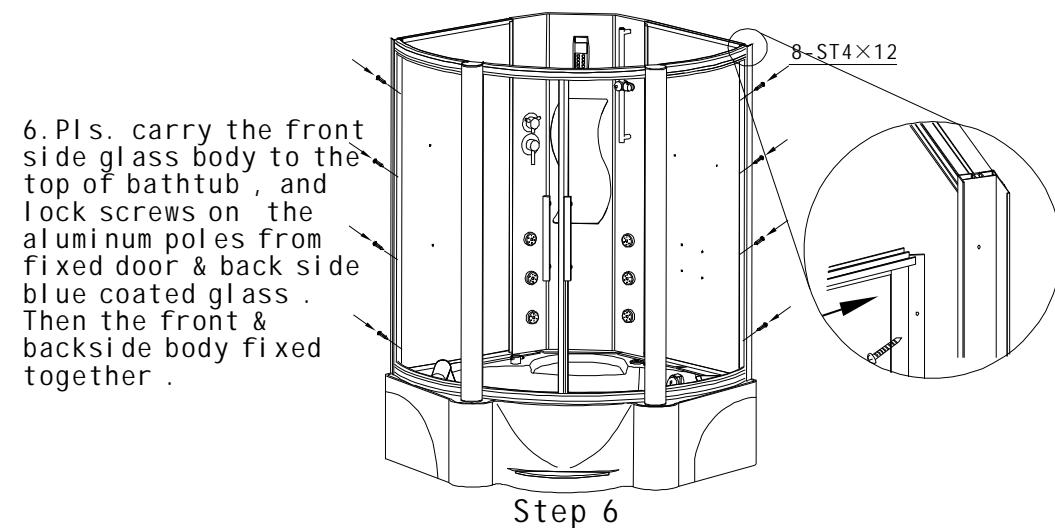


6. Pls. carry the front side glass body to the top of bathtub, and lock screws on the aluminum poles from fixed door & back side blue coated glass. Then the front & backside body fixed together.


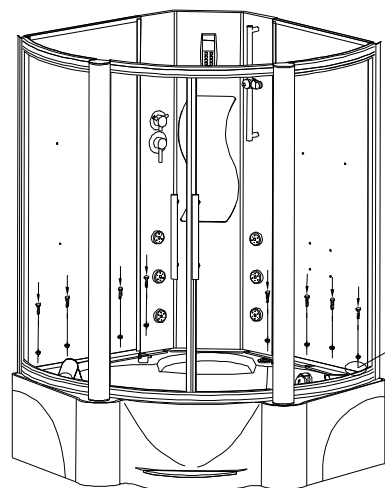


Step 7

8-ST4×12

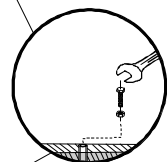


7. Per the ready screw holes, pls. fix the whole steam room body on the bathtub.

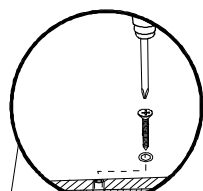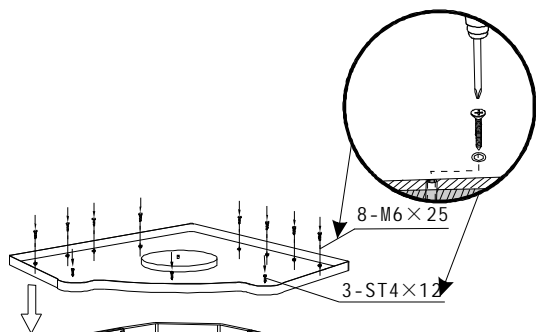

8-M6×25


3-ST4×12

8. Put the top on the steam room body, and then lock the screws on ready screw holes on top ..


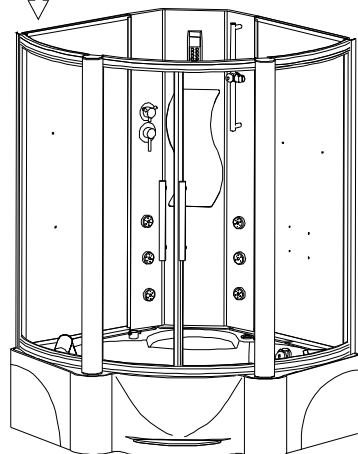


Step 8

● Drawing of water connection

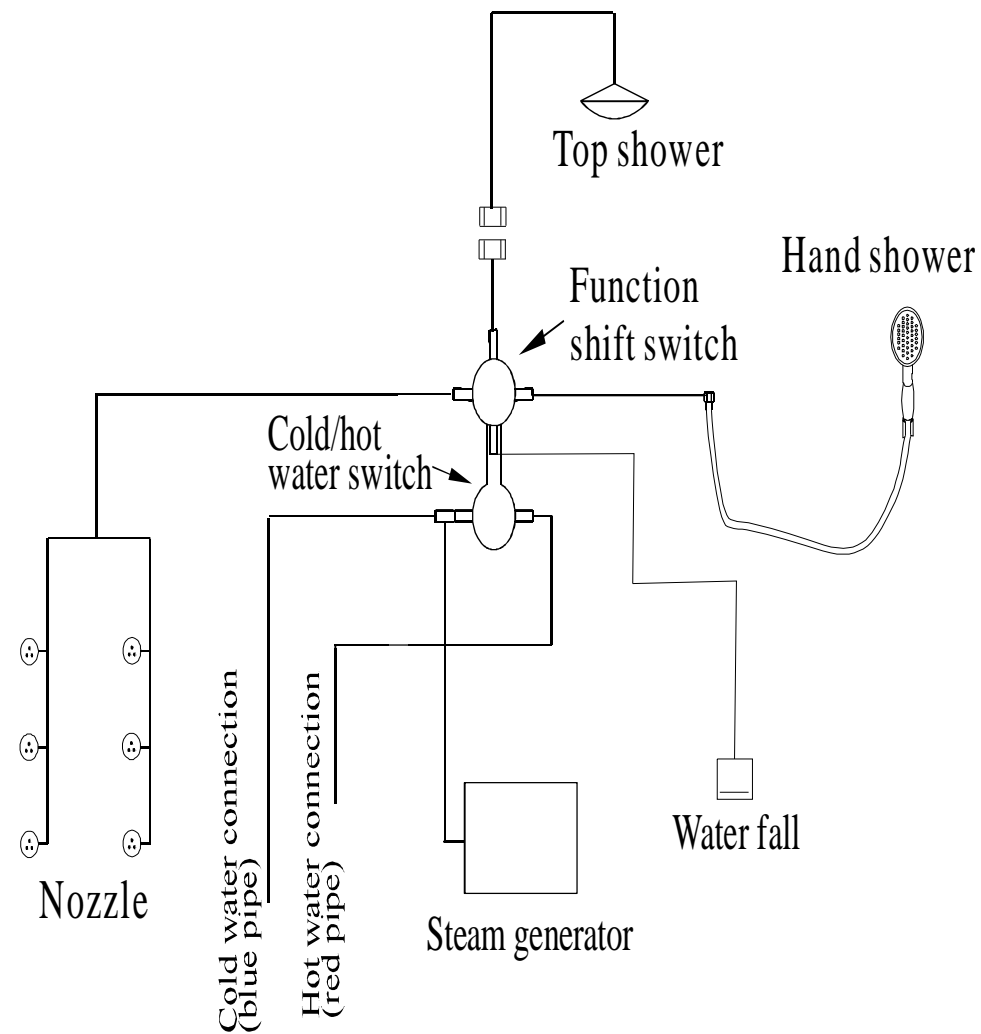

● DRAWING OF ELECTRICITY CONNECTION

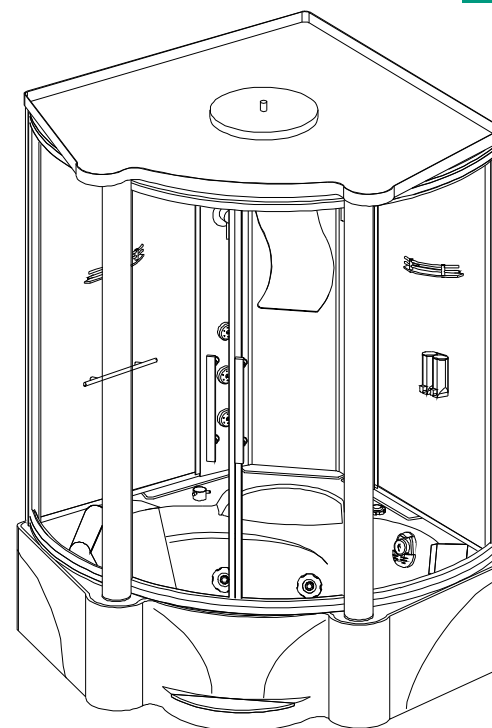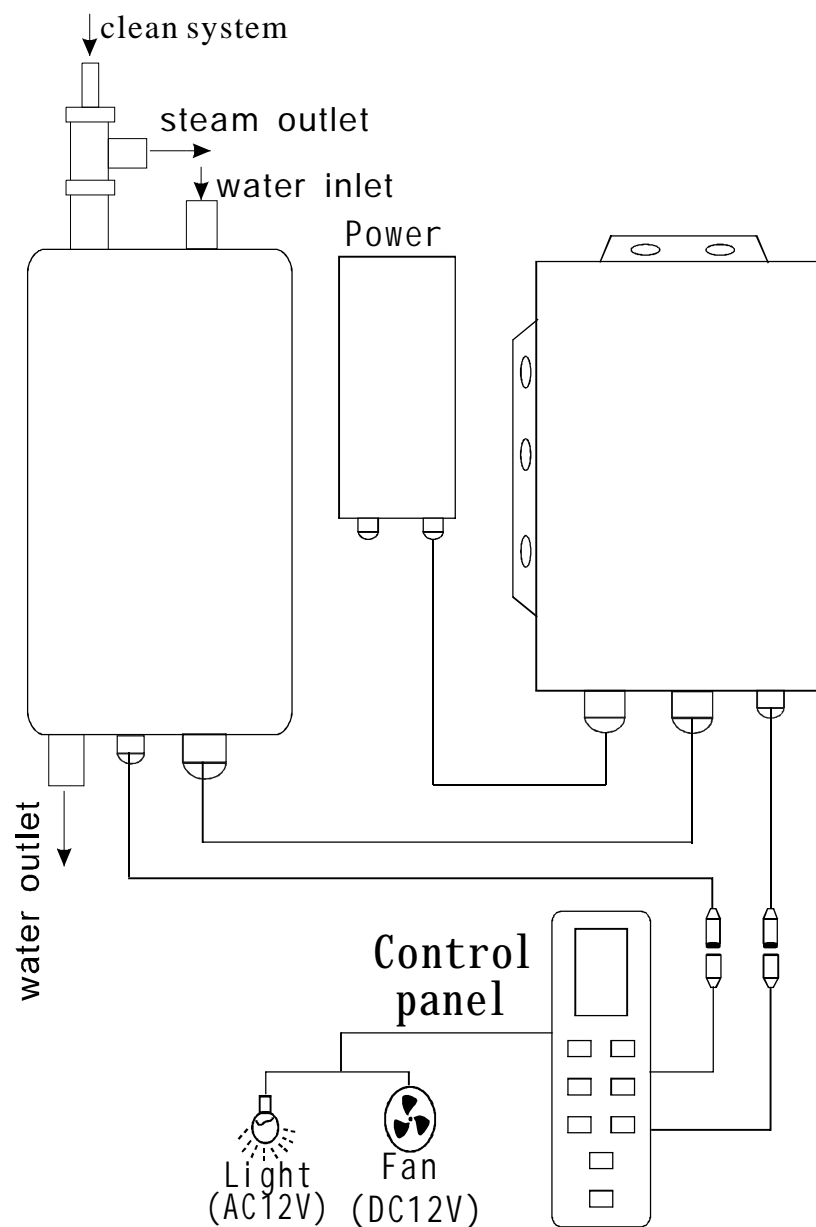

OK

9. Pls. put glass glue on fixed door bottom outside & inside and inside top part ..

10. Finish cable & water pipe connection. (pls. kindly check the attached picture).